


# Positiv Me 600

## Operating Instructions



Extendable backrest and seat

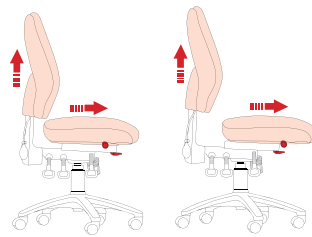

## Adjustments

01. Ergonomic arm pads (optional)
02. Flex-front seat pan
03. Seat slide adjustment paddle
04. Secondary seat slide adjustment control
05. Body weight tension control
06. Seat height adjustment paddle
07. Independent seat tilt
08. Back rest adjustment
09. Ratchet back height adjustment
10. Lumbar panel
11. Lumbar support control pump (optional)

## Guarantee

All models carry a full 5 year structural guarantee, 2 years on moving parts and upholstery and 1 year for 24 hour use, all subject to normal usage.

All gas lifts are suitable for users up to 150kg.

For users over 115kg a metal base is recommended.

## Dimensions

CHAIR MODEL	Me 600
Back height (mm)	540-600 mm
Back width (mm)	460 mm
Seat width (mm)	460 mm
Seat depth (mm)	420-580 mm
Seat height (mm)	490-550 mm
Seat Slide	130 mm

[www.posturite.co.uk](http://www.posturite.co.uk)

# Positiv Me 600

## Assembly Instructions



## Assembly

- A. Locate gas lift with plastic cover into five star base/casters.
- B. Locate seat assembly onto gas lift i.e. top of gas lift into circular hole in centre of under-seat mechanism.
- C. Locate back assembly into the aperture at the rear of the seat and push firmly into place.

**Please take care when lifting the chair as it is heavy when assembled and may need two people.**

[www.posturite.co.uk](http://www.posturite.co.uk)