


Installation instructions for Flo grommet mount DYN/013/CSG100






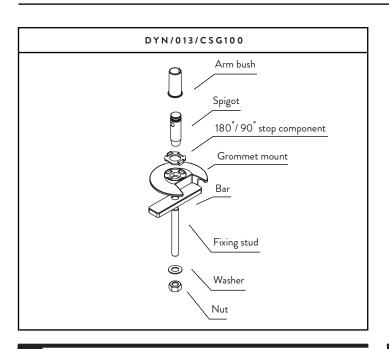


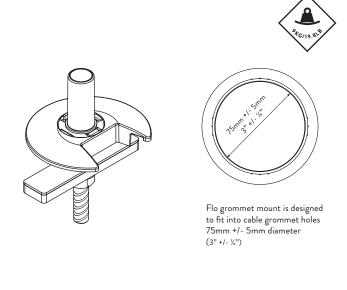

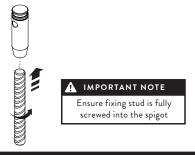


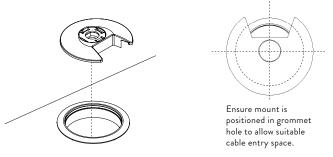

POSITION FIXING STUD AND SPIGOT

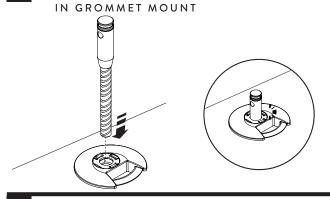


4 INSTALL CABLES

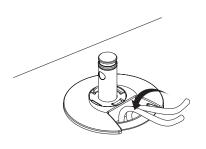


Ensure all cables are installed through grommet hole at this stage.

FULLY TIGHTEN BAR, WASHER AND NUT AGAINST THE UNDER SIDE OF THE DESK

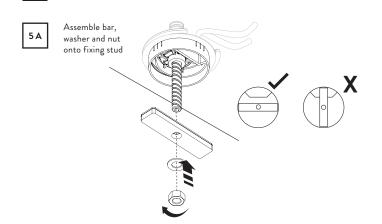


Use screwdriver or similar tool to hold spigot in place whilst tightening nuts under desk with spanner


Ensure nut is fully tightened (9 to 10NM recommended torque)

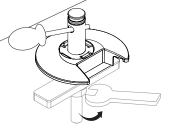



CONFIGURE 180°/ 90° STOP COMPONENT

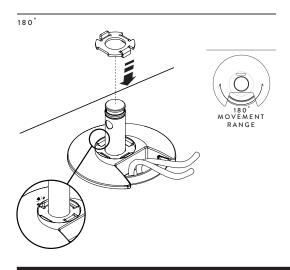

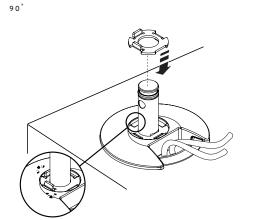







LEFT CORNER

RIGHT CORNER




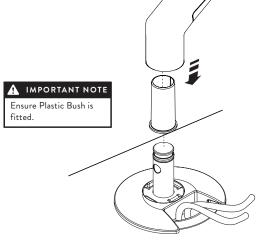

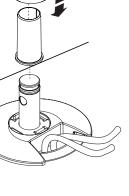



CABLE MANAGEMENT INSTALLATION

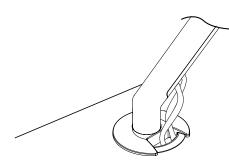

⚠ IMPORTANT NOTE

Ensure enough cable slack to avoid straining cables throughout arm movement range.



SEE MONITOR ARM INSTRUCTIONS FOR CABLE MANAGEMENT INSTALLATION

PATENTS

Colebrook Bosson Saunders hold a number of patents and other intellectual property rights covering our products and processes. You can find patent information on our website at:

www.colebrookbossonsaunders.com/patents

Please consider leaving these instructions with the product if further installation may be required by others

- Do not use this product for any purpose other than that for which it was designed
- Ensure desk/work surface is suitable to take the weight of the arm/s and monitors
- Supported weight must not exceed the maximum load per arm
- Take care when installing as fingers could become trapped

⚠ MAINTENANCE AND INSPECTION

- Ensure all screws and fixings are fully tightened and occasionally re-tighten if necessary.
- Clean with a damp cloth. DO NOT use solvents.

⚠ DISCLAIMERS

- The use of power tools, lever bars or excessive force during the installation, or re-configuration of the product will invalidate your guarantee
- Failure to observe the recommendations in the use, and configuration of these products may affect your guarantee
- As a part of Colebrook Bosson Saunders ongoing product improvement programme, the design of products may change without prior notice and details may vary from those illustrated